

CHB-MIT: raw, as stored

Patient chbmit:chb01 file chbmit_v1.0.0/chb01/chb01_03.edf

Recording start (header): 06.11.76 13.43.04 duration 1.00 h

23 signals; sampling rates (Hz): 256; units: μV

Channel labels: FP1-F7, F7-T7, T7-P7, P7-O1, FP1-F3, F3-C3, C3-P3, P3-O1, FP2-F4, F4-C4, C4-P4, P4-O2, FP2-F8, F8-T8, T8-P8, P8-O2, FZ-CZ, CZ-PZ, P7-T7, T7-FT9, FT9-FT10, FT10-T8, T8-P8

Seizure annotation, as written in chb01-summary.txt:

File Name: chb01_03.edf

File Start Time: 13:43:04


File End Time: 14:43:04

Number of Seizures in File: 1


Seizure Start Time: 2996 seconds

Seizure End Time: 3036 seconds


10 s of raw channels from 2991 s (seizure onset at 5 s) (channels $251 \mu\text{V}$ apart)

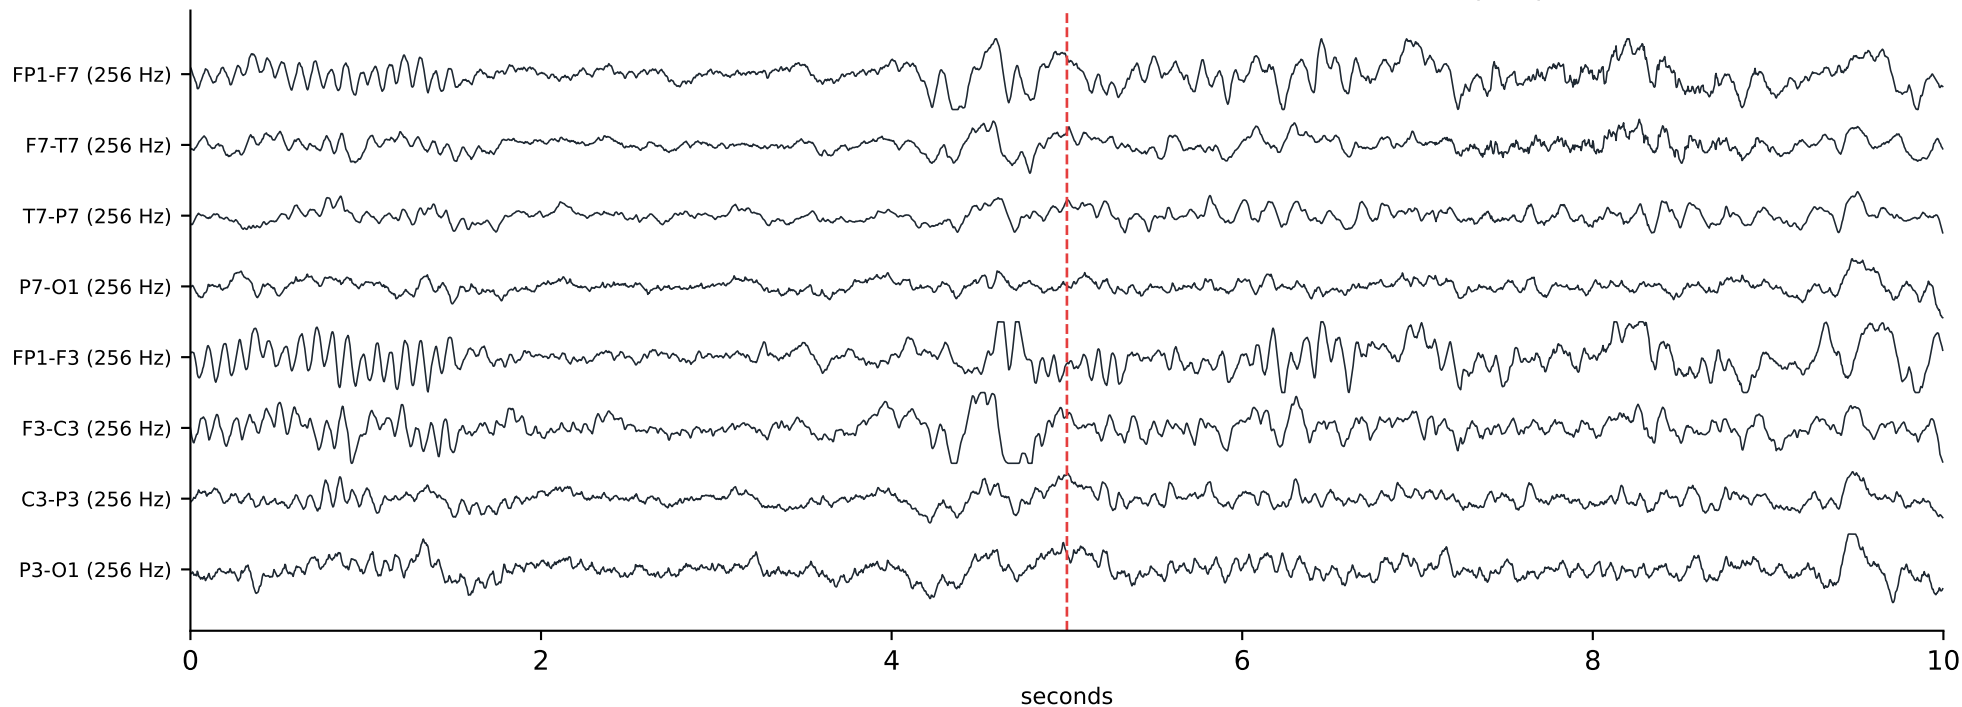

CHB-MIT: labels and cleaned signal

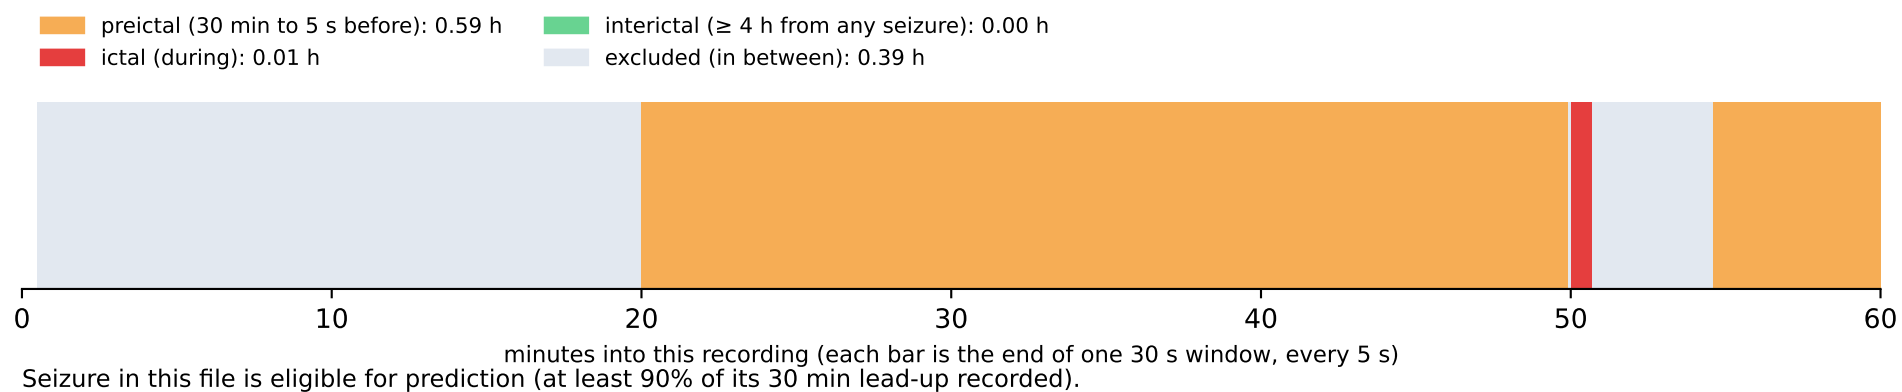

The same 10 s, cleaned: 18 of 18 standard bipolar derivations, 256 Hz, μV (channels 303 μV apart)

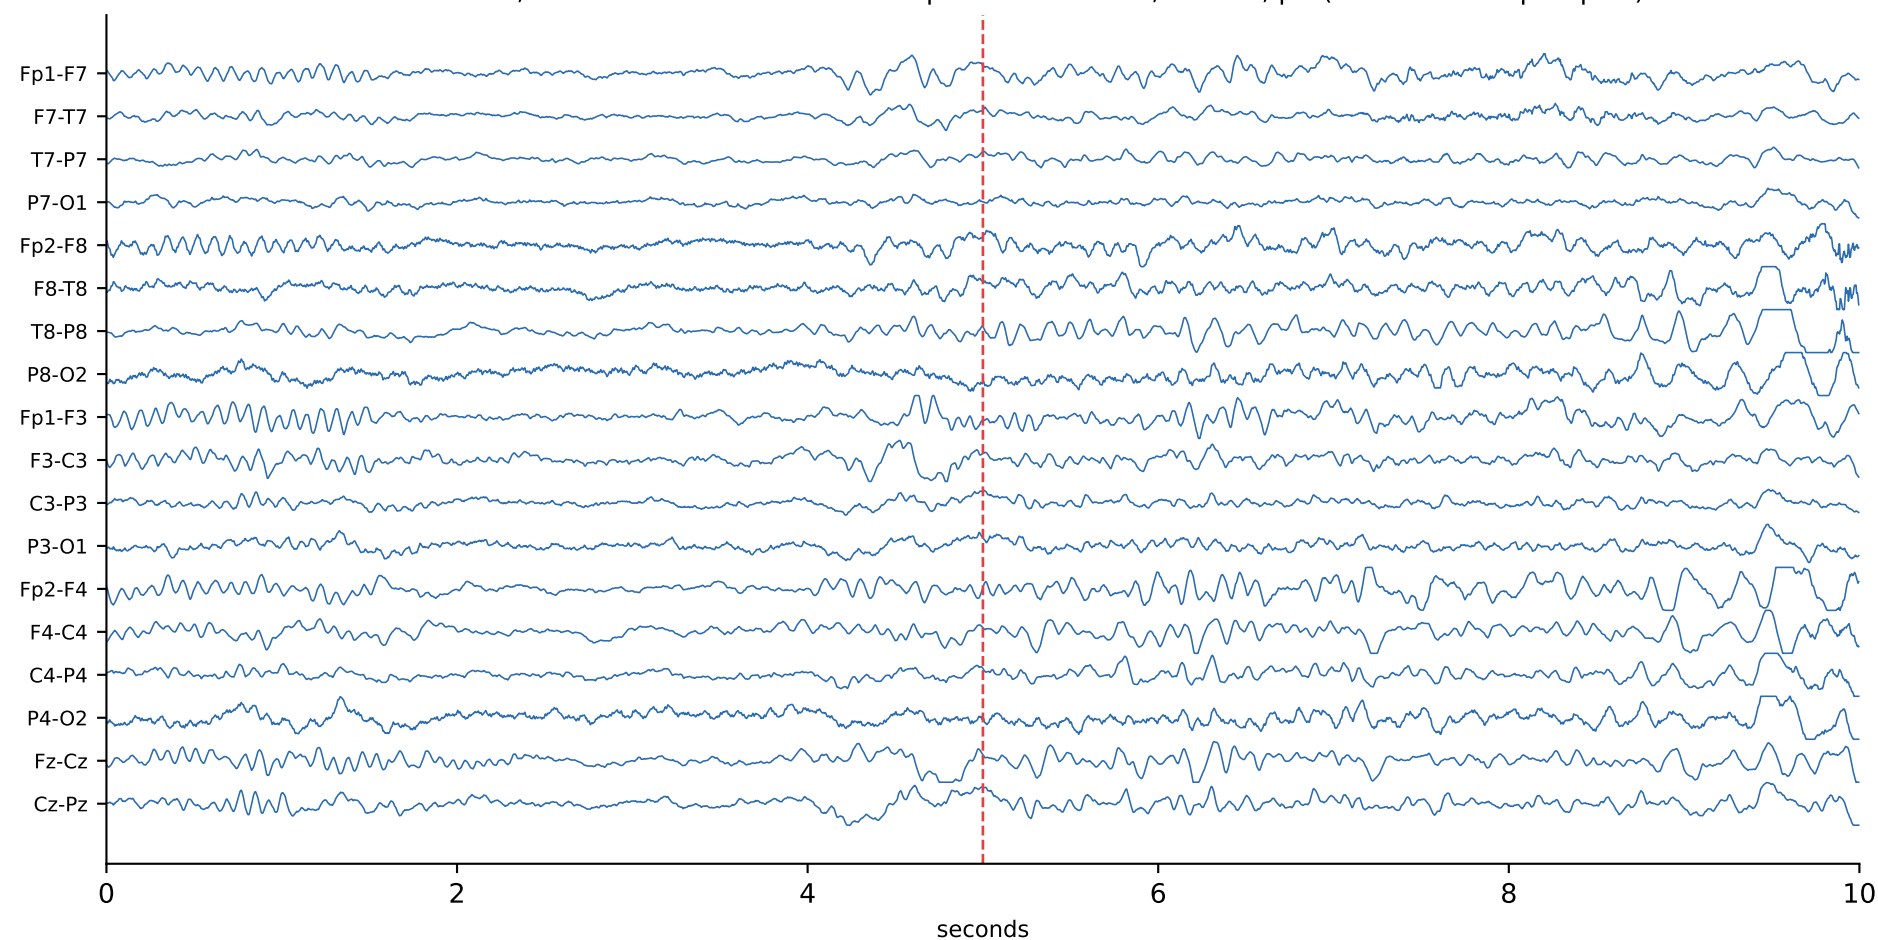

Siena: raw, as stored

Patient siena:PN01 file siena_v1.0.0/PN01/PN01-1.edf

Recording start (header): 01.01.16 19.00.44 duration 13.49 h

35 signals; sampling rates (Hz): 512; units: %, bpm, uV

Channel labels: EEG Fp1, EEG F3, EEG C3, EEG P3, EEG O1, EEG F7, EEG T3, EEG T5, EEG Fc1, EEG Fc5, EEG Cp1, EEG Cp5, EEG F9, EEG Fz, EEG Cz, EEG Pz, EEG Fp2, EEG F4, EEG C4, EEG P4, EEG O2, EEG F8, EEG T4, EEG T6, EEG Fc2, EEG Fc6, EEG Cp2, EEG Cp6, EEG F10, EKG EKG, SP02, HR, 1, 2, MK

Seizure annotation, as written in Seizures-list-PN01.txt:

PN01


Data Sampling Rate: 512 Hz

Channels in EDF files:


Channel 1: Fp1

Channel 2: F3


10 s of raw channels from 10213 s (seizure onset at 5 s) (channels 124 μ V apart)

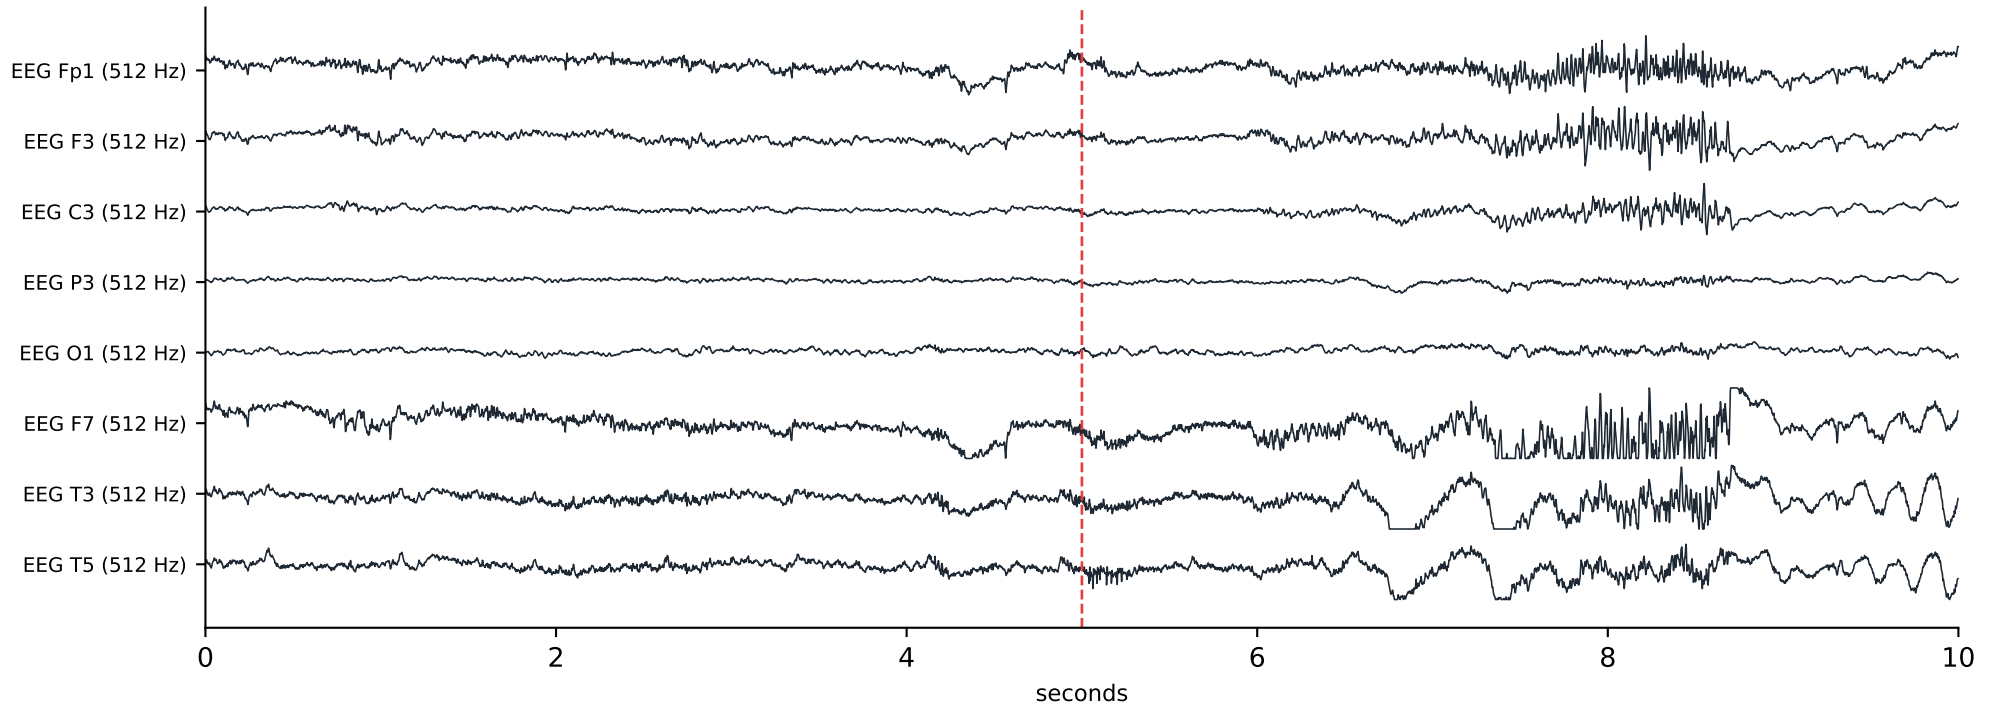

Siena: labels and cleaned signal

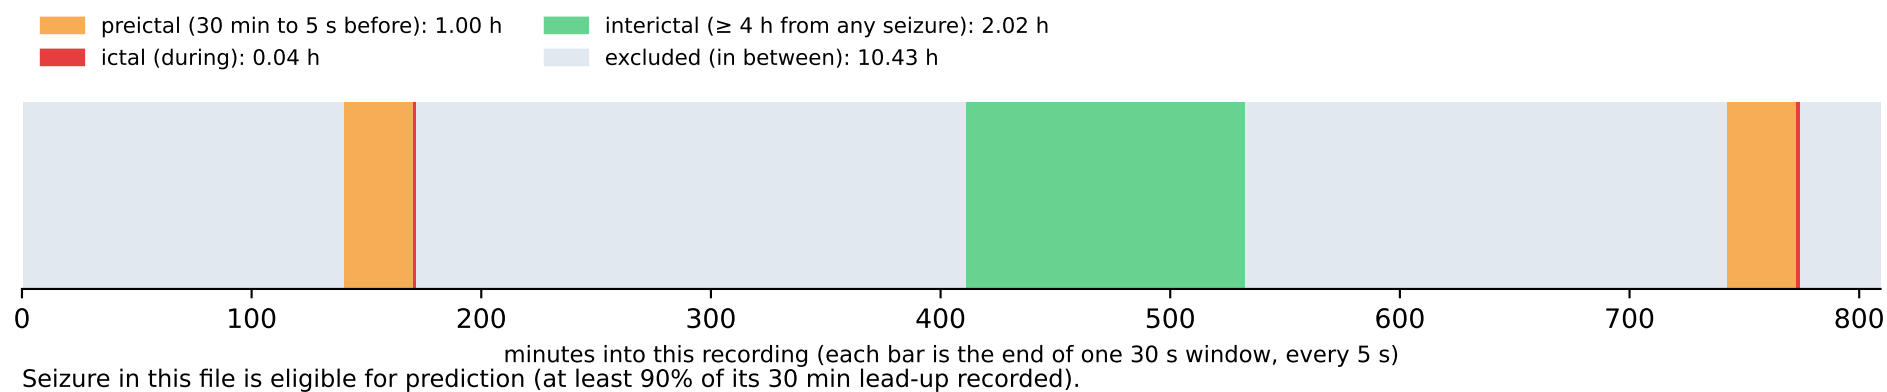

The same 10 s, cleaned: 18 of 18 standard bipolar derivations, 256 Hz, μV (channels 1094 μV apart)

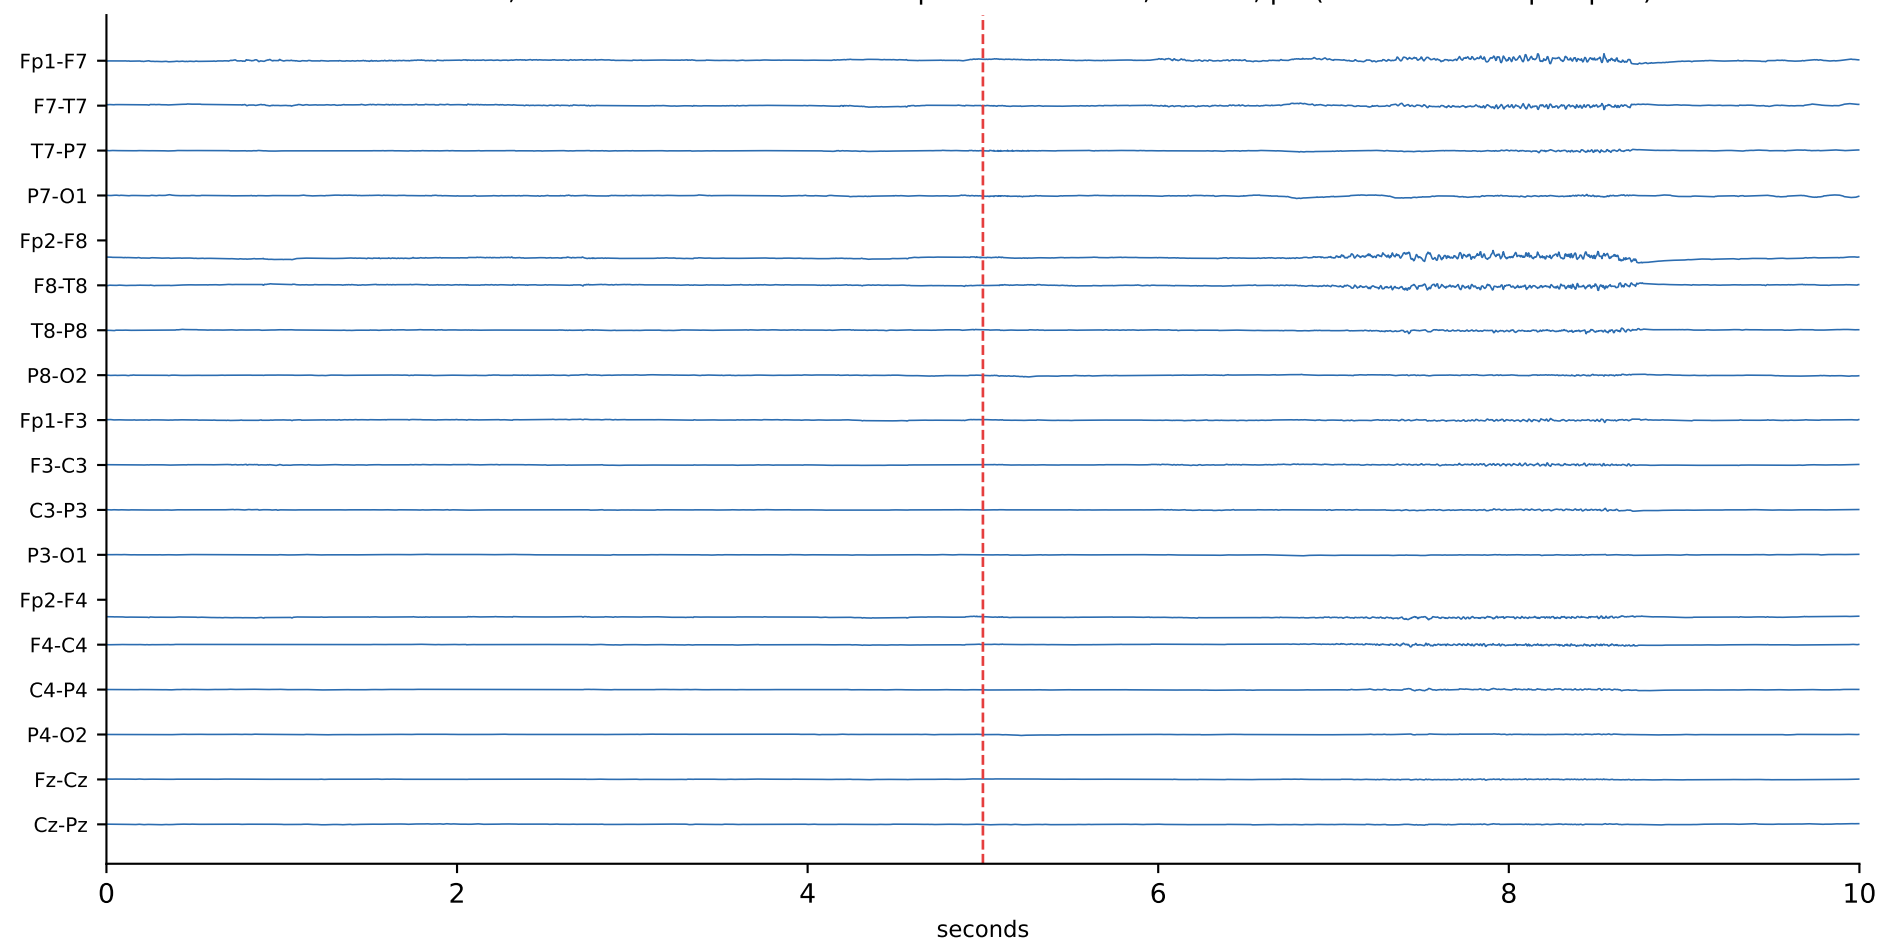

TUSZ: raw, as stored

Patient tuh:aaaaaaac file tusz_v2.0.6/edf/train/aaaaaaac/s001_2002/02_tcp_le/aaaaaaac_s001_t000.edf

Recording start (header): 01.01.02 00.00.00 duration 0.08 h

33 signals; sampling rates (Hz): 250; units: mm, uV

Channel labels: EEG FP1-LE, EEG FP2-LE, EEG F3-LE, EEG F4-LE, EEG C3-LE, EEG C4-LE, EEG A1-LE, EEG A2-LE, EEG P3-LE, EEG P4-LE, EEG O1-LE, EEG O2-LE, EEG F7-LE, EEG F8-LE, EEG T3-LE, EEG T4-LE, EEG T5-LE, EEG T6-LE, EEG FZ-LE, EEG CZ-LE, EEG PZ-LE, EEG OZ-LE, EEG PG1-LE, EEG PG2-LE, EEG EKG-LE, EEG SP2-LE, EEG SP1-LE, EEG RLC-LE, EEG LUC-LE, EEG 30-LE, EEG T1-LE, EEG T2-LE, PHOTIC PH

Seizure annotation, as written in aaaaaaac_s001_t000.csv_bi:

version = csv_v1.0.0

bname = aaaaaaac s001 t000

duration = 301.0000 secs


montage_file = 02_tcp_le_montage.txt

#


channel,start_time,stop_time,label,confidence

TERM,36.8868,237.2101,seiz,1.0000


10 s of raw channels from 32 s (seizure onset at 5 s) (channels 7738 μ V apart)

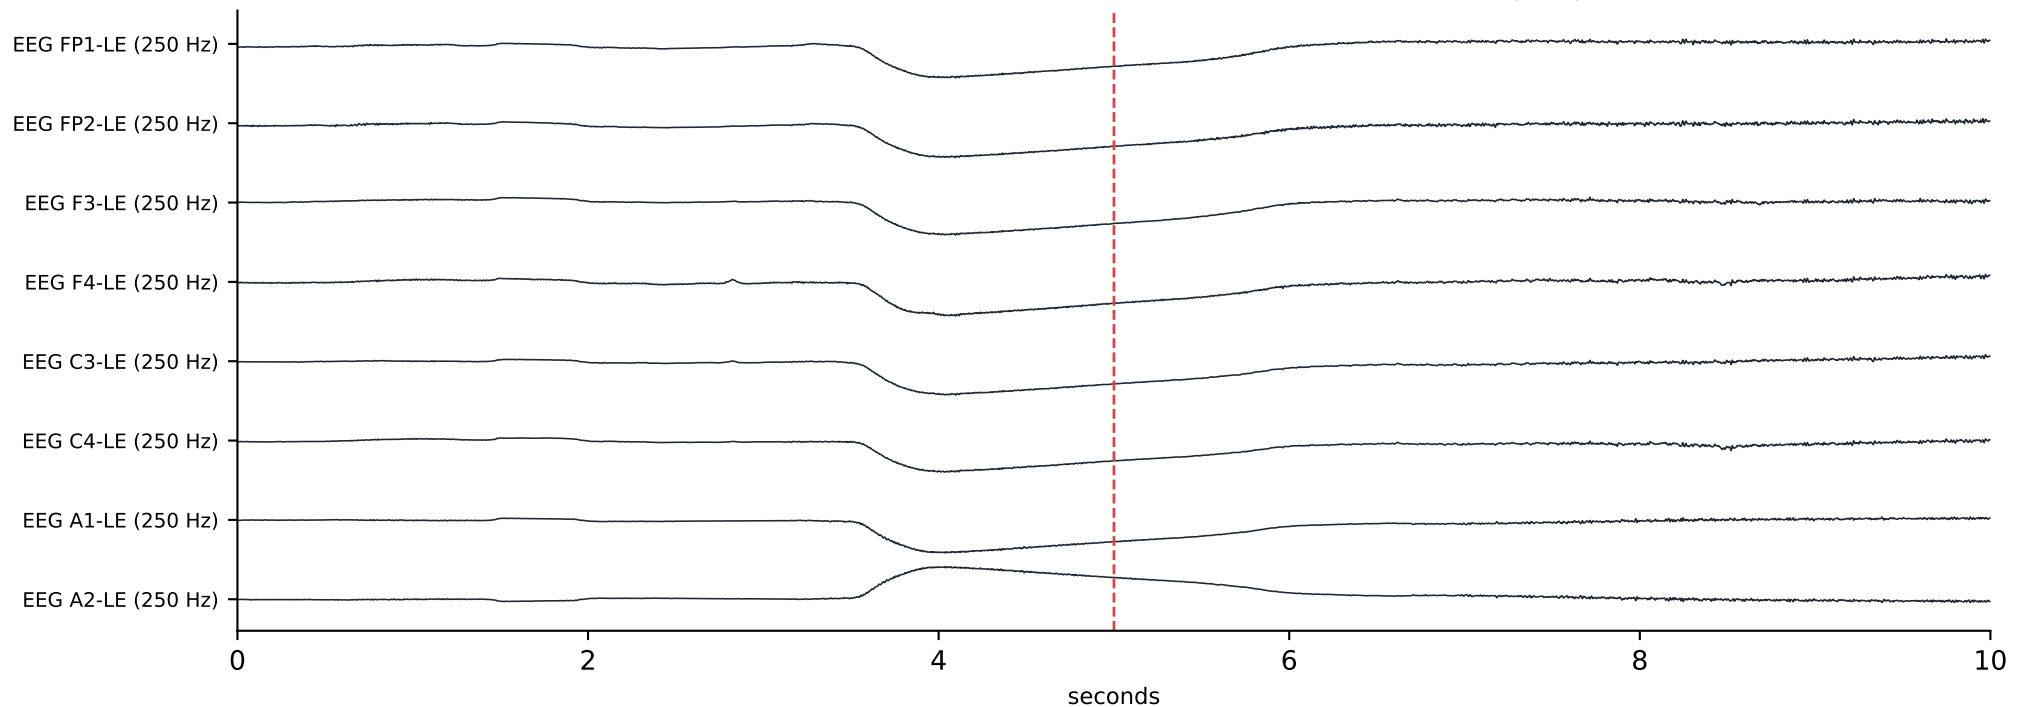

TUSZ: labels and cleaned signal

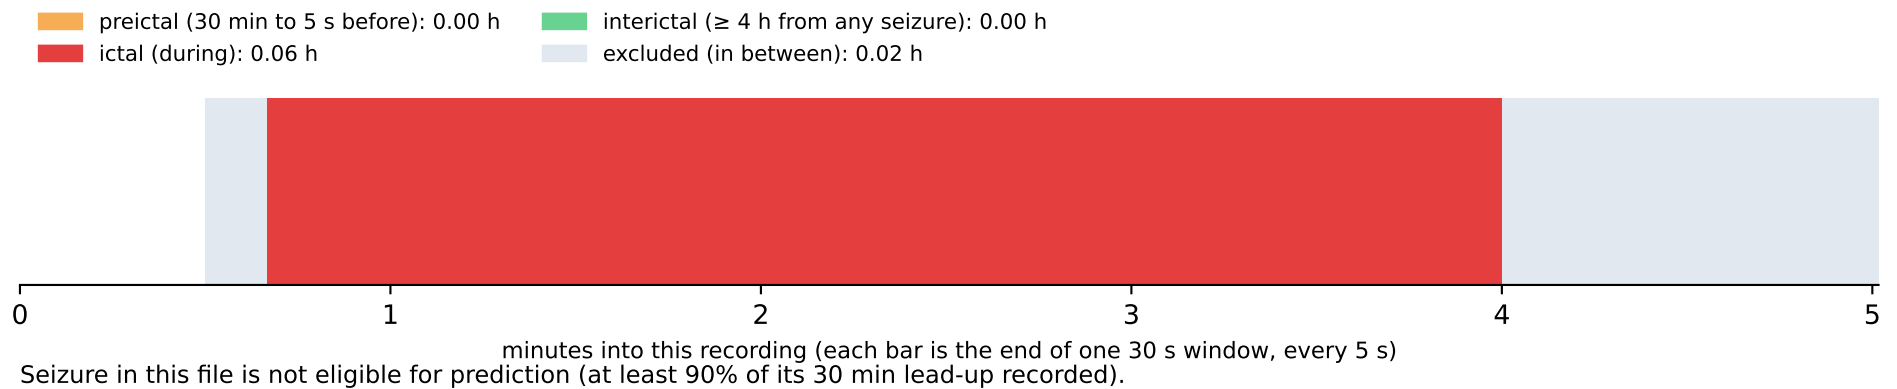

The same 10 s, cleaned: 18 of 18 standard bipolar derivations, 256 Hz, μV (channels 5140 μV apart)

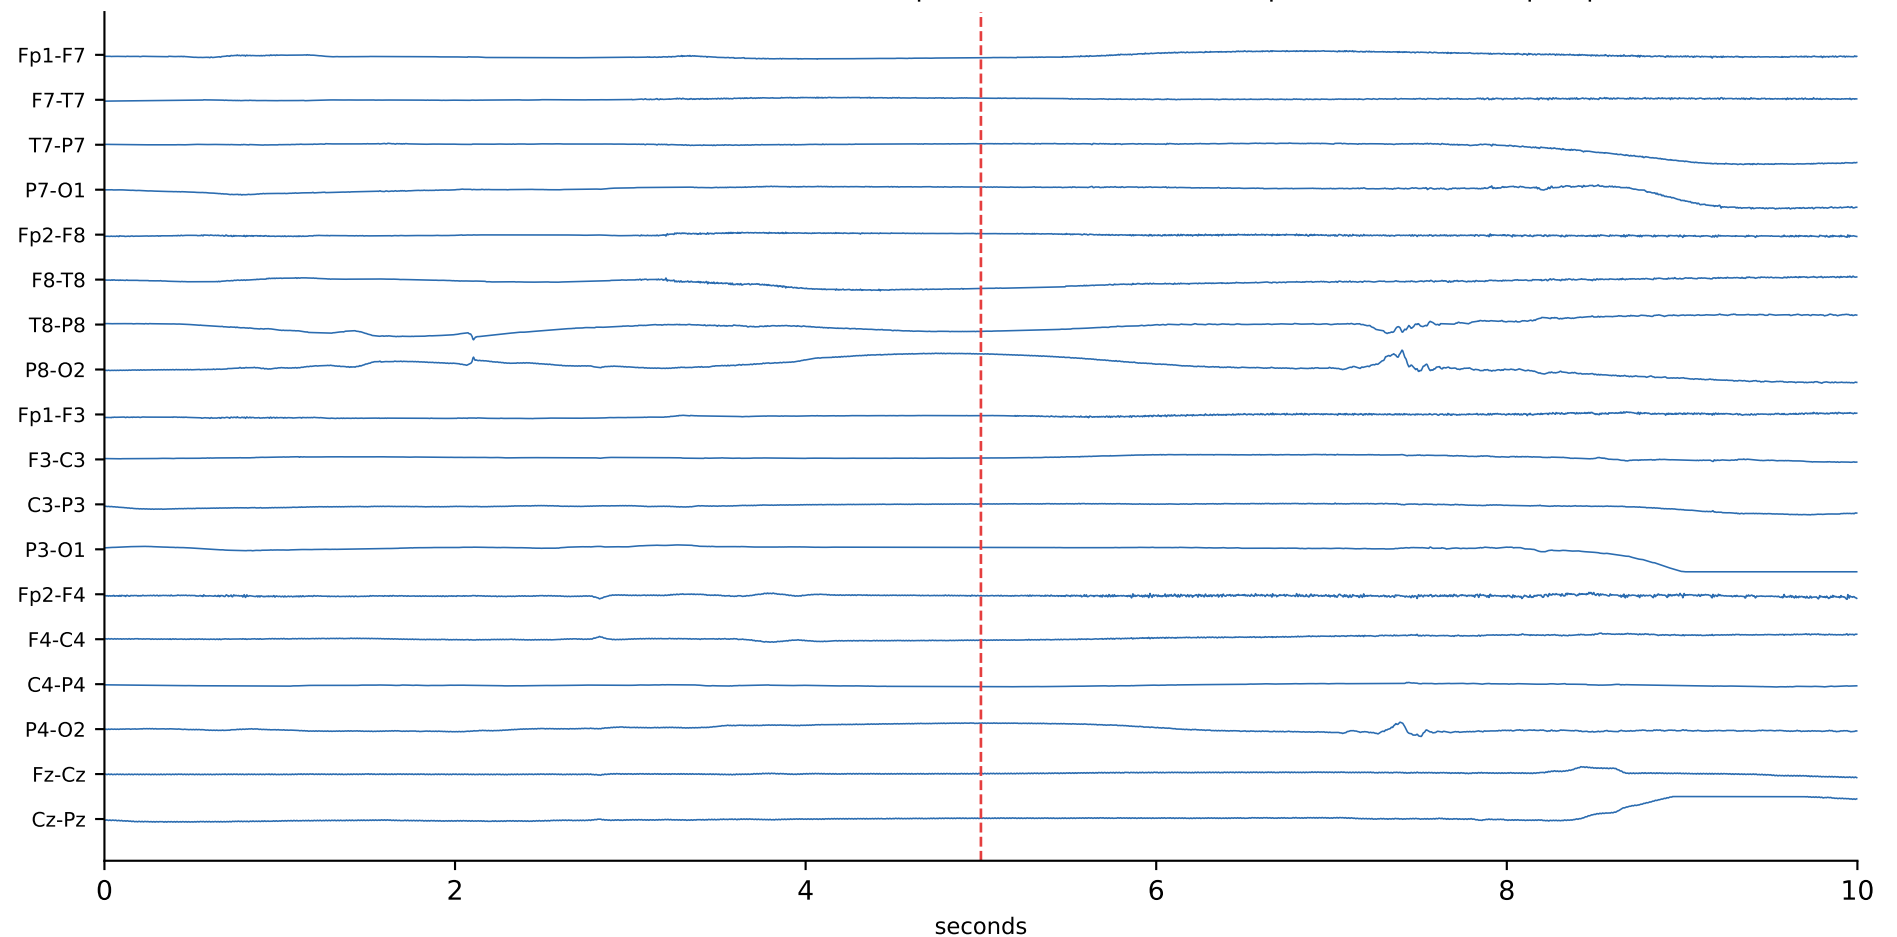

Mental arithmetic: raw, as stored

Patient mental_arith:Subject00 file mental_arith_v1.0.0/Subject00_1.edf


Recording start (header): 01.01.11 00.00.00 duration 0.05 h

22 signals; sampling rates (Hz): 500, 57; units: (blank), mV, μ V


Channel labels: EEG Fp1, EEG Fp2, EEG F3, EEG F4, EEG F7, EEG F8, EEG T3, EEG T4, EEG C3, EEG C4, EEG T5, EEG T6, EEG P3, EEG P4, EEG O1, EEG O2, EEG Fz, EEG Cz, EEG Pz, EEG A2-A1, ECG ECG, EDF Annotations

Seizure annotation, as written in (none):


This dataset has no seizure annotation file for this recording.

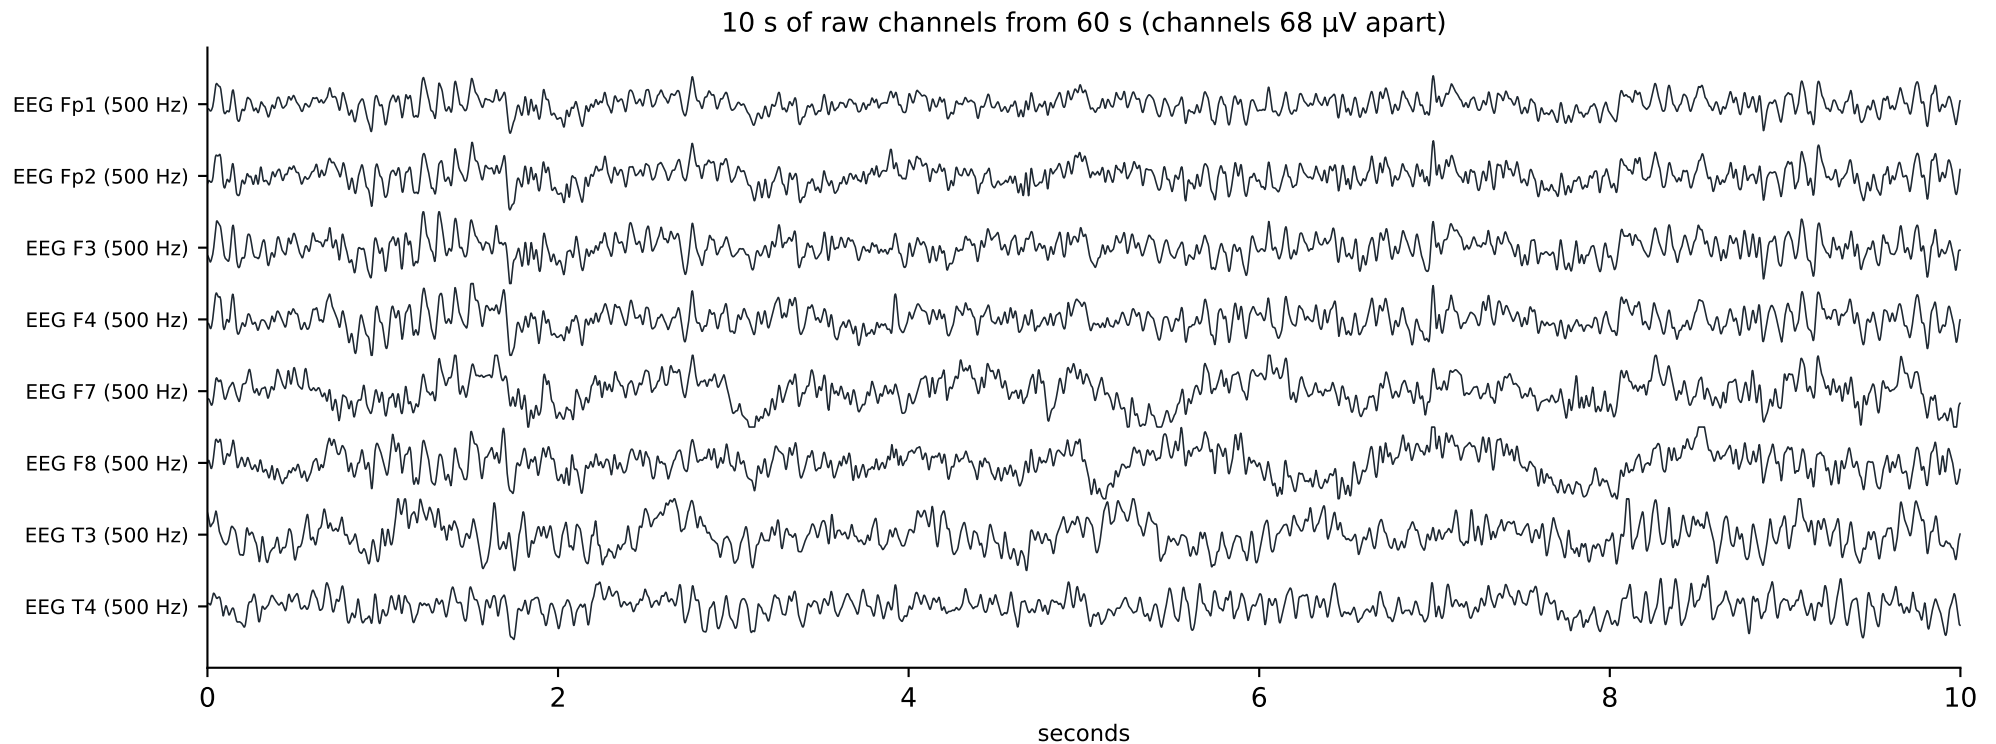

Mental arithmetic: labels and cleaned signal

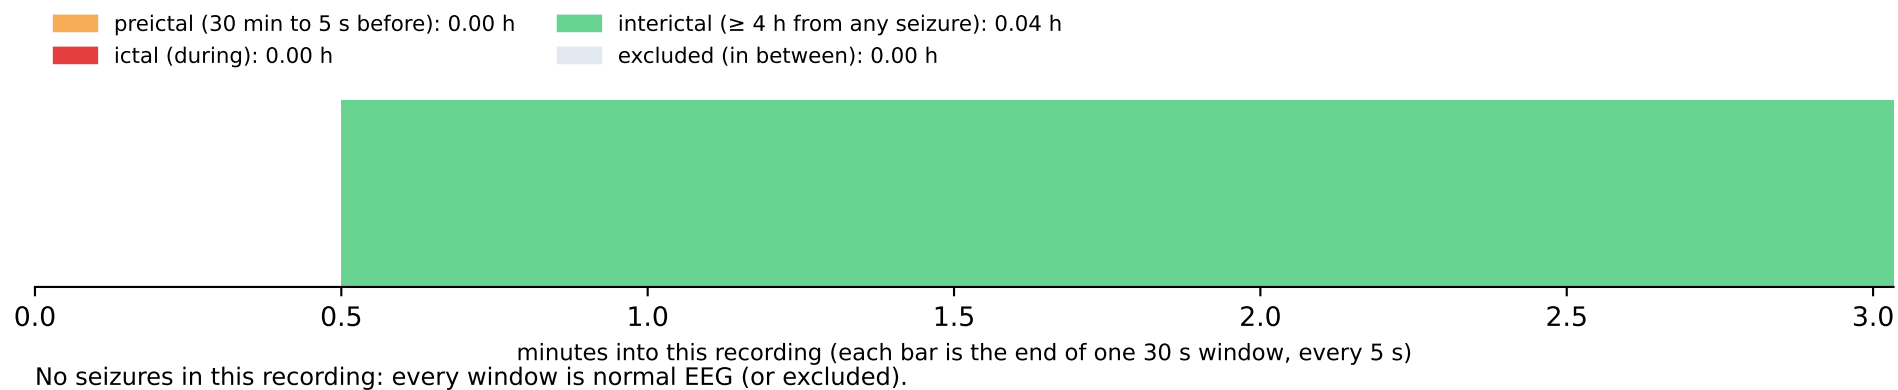

The same 10 s, cleaned: 18 of 18 standard bipolar derivations, 256 Hz, μV (channels 63 μV apart)

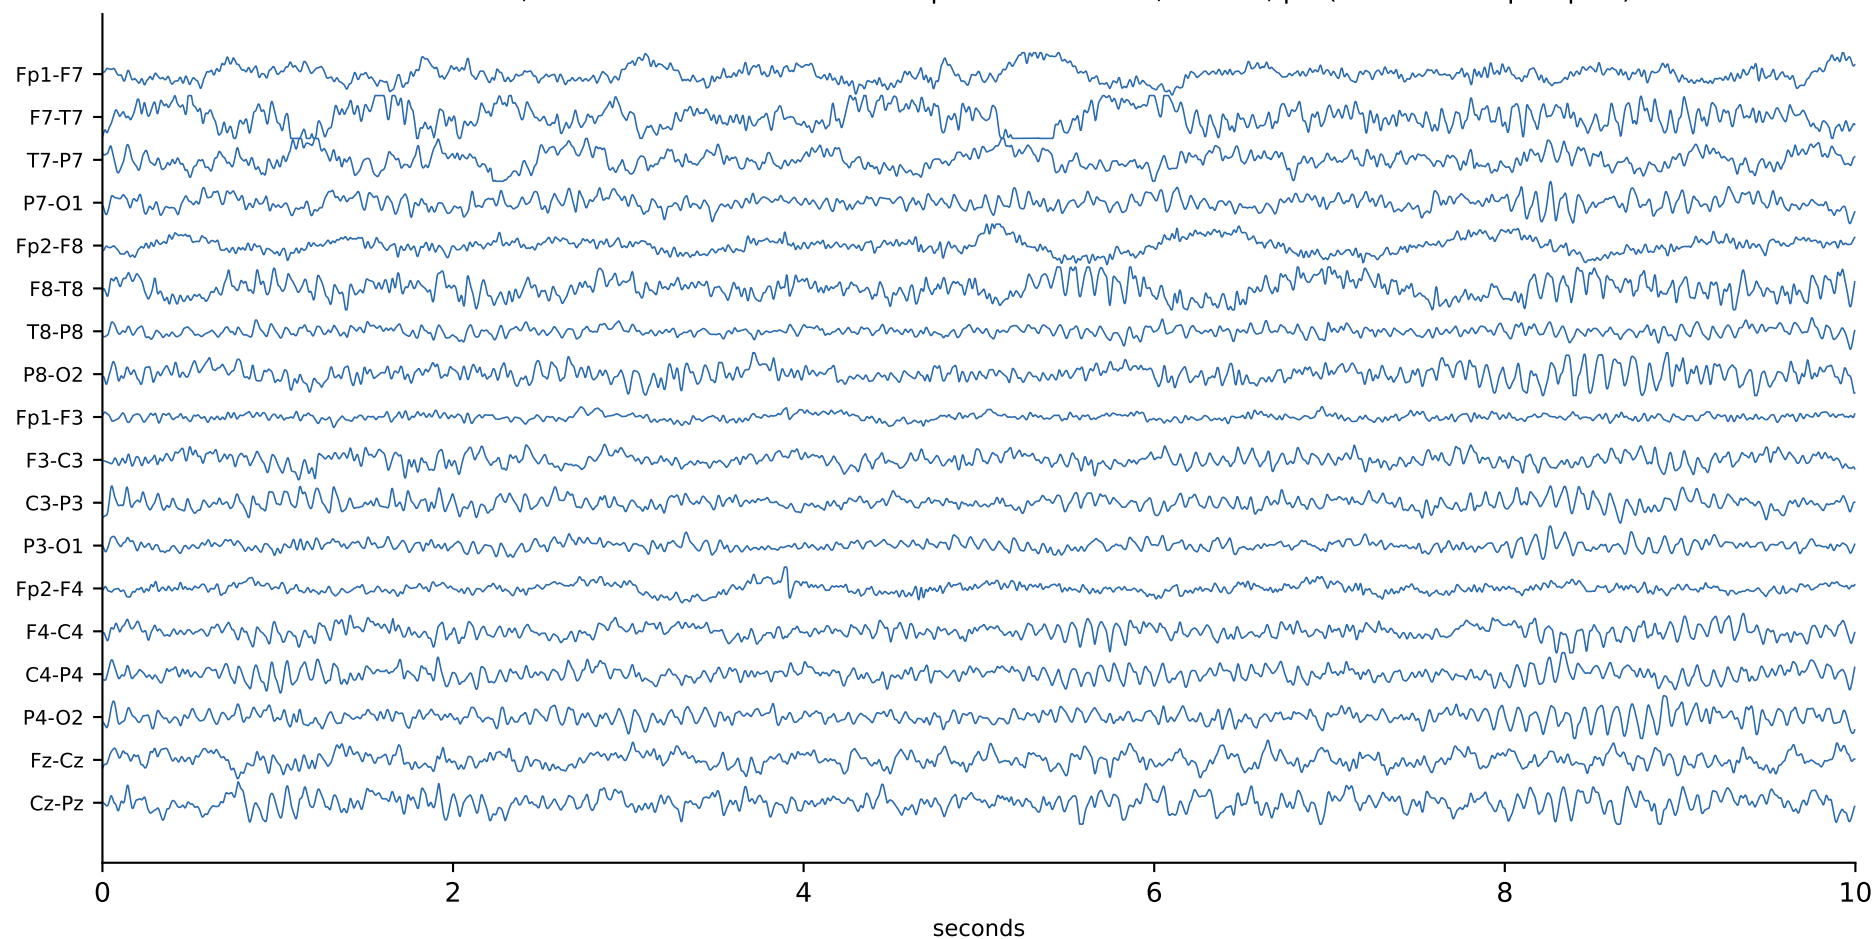


SeizelT2 (development patients): raw, as stored

Patient seizuret2:sub-001 file seizuret2_v1.1.0/sub-001/ses-01/eeg/sub-001_ses-01_task-szMonitoring_run-03_eeg.edf
Recording start (header): 01.01.00 00.00.00 duration 18.05 h
3 signals; sampling rates (Hz): 256, 57; units: (blank), μV
Channel labels: BTEleft SD, CROSSstop SD, EDF Annotations


Seizure annotation, as written in sub-001_ses-01_task-szMonitoring_run-03_events.tsv:

onset	duration	eventType	lateralization	localization	vigilance	confidence	channels	dateTime	recor
23059.00	6.00	impd	n/a	n/a	n/a	n/a	n/a	2000-01-01 00:00:00	64979.00
23248.00	5.00	impd	n/a	n/a	n/a	n/a	n/a	2000-01-01 00:00:00	64979.00
57975.00	72.00	sz_foc_ia_nm	left	temp	asleep	n/a	n/a	2000-01-01 00:00:00	64979.00

10 s of raw channels from 57970 s (seizure onset at 5 s) (channels 106 μV apart)

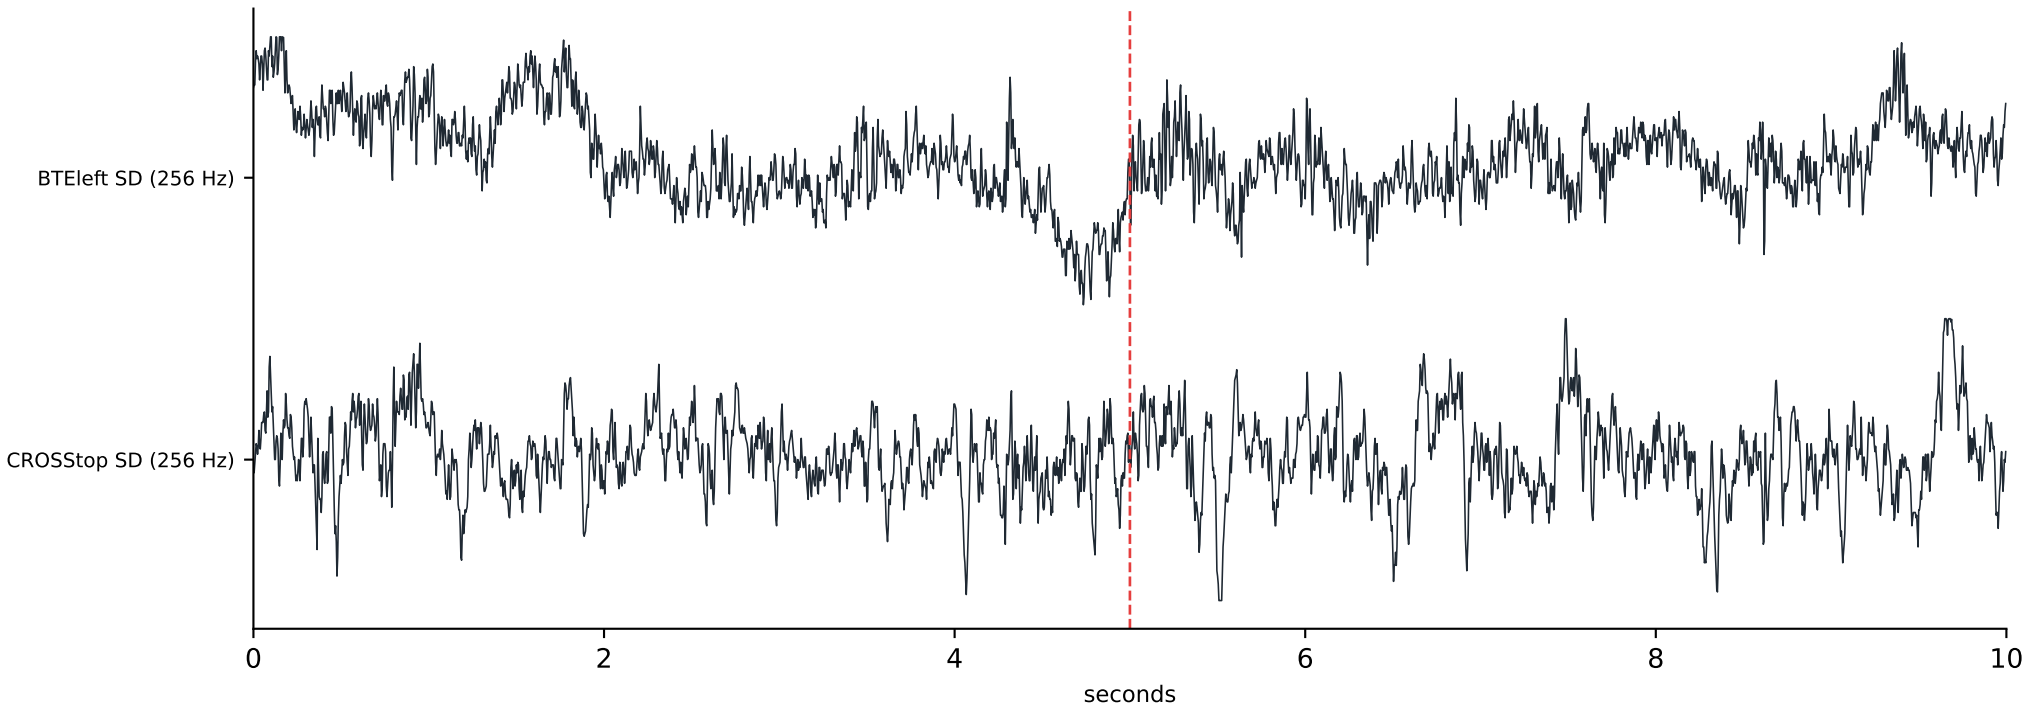

SeizelT2 (development patients): labels and cleaned signal

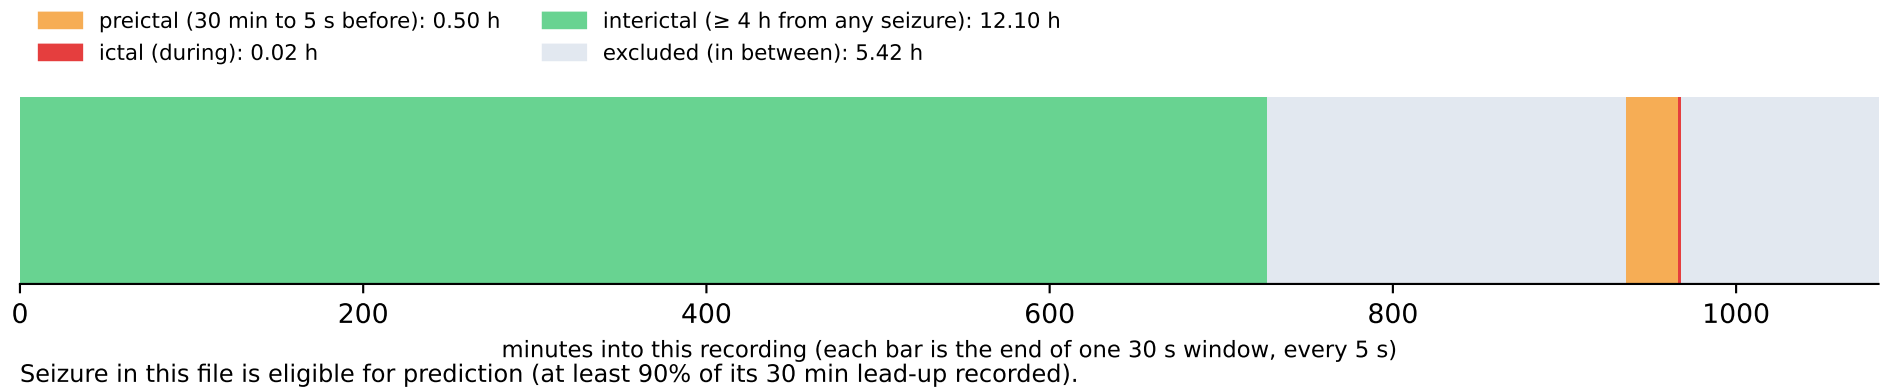

The same 10 s, cleaned: behind-the-ear channels, resampled to 256 Hz, in μV (channels 106 μV apart)

